 





agora Goals are 100% aerospace-grade aluminum for all-weather, heavy-duty performance and lightweight convenience and safety. Push-button connections. Two person assembly required.



STEP 1 & 2

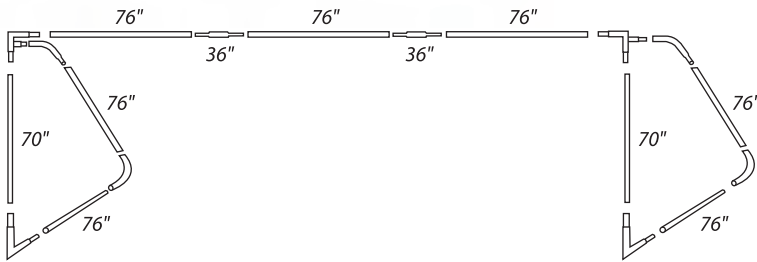

STEP 3 & 4





STEP 5 & 6

ASSEMBLY:

1. Lay the pieces on the field and assemble crossbar.
2. Connect top corner pieces to ends of crossbar.
3. Connect side post (2 shorter pieces with warning sticker).
4. Connect bottom corners pieces.
5. Attach pieces A, B, C & D together.
6. Attach connected ABCD to assembled goal frame.
Note: Ends of A & D must be inserted by two people, simultaneously, in order to connect properly.
7. Between two people raise the goal carefully into place.
8. Attach goal anchors.

Push-button assembly

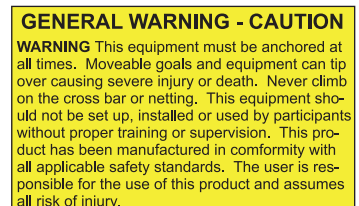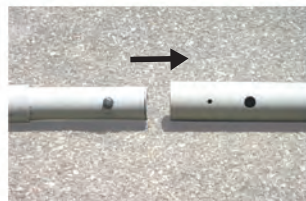


AGORA BACK-BOTTOM BARS (SA-GB721)



Fits Semi-Pro & Premier 7'X21' Goals



 agora Back-bottom Bars are 100% rust-proof aerospace-grade aluminum. White powder-coated.



ASSEMBLY:

1. Attach pieces together as shown in illustration above.
2. Insert bolts through the holes located at the base of the goal. Connect Back-bottom bar to the bolts (Figure A).
3. Fasten nut by using wrench and allen wrench included (Figure B).
4. Attach other side of the bar by repeating step 2-3.

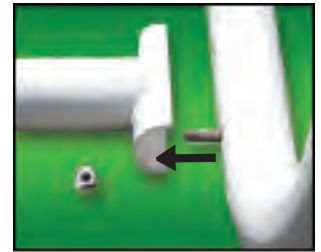


Figure A

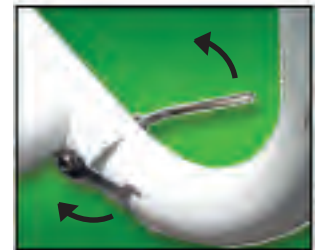


Figure B

